

Using Classroom Projectors & Document Cameras



Projector Control Panel

- Power:**
Press & hold button until you hear a beep
- Source:**
Video = document camera
Comp = computer
- Volume:**
Down Arrow = lower
Up Arrow = higher



Projector Remote


Use as a backup if you control panel on the wall is not working

- Top button = power
- Menu = projector setting menus
- Up & down arrows = moves to make selections in menus
- Select = choose options from menus
- Source = choose what you want to view (i.e. computer; document camera; DVD)



Projector Buttons

- Volume
- Menu Settings
- Power

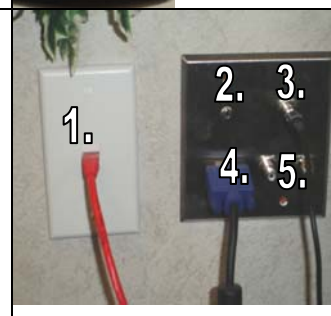

Wall Connections

- Internet to computer
- Sound from mp3 player/iPod
- Document camera
- Computer to projector
- Sound from DVD player



Document Camera Parts

- Arm extends up & down
- Camera rotates to determine orientation
- Manual focus dial
- Light setting switch
- Control panel



Doc Cam Buttons

- Sources:** Camera, PC, Playback, VGA/TV
- Zoom:** (+) zoom in; (-) zoom out
- Cap/Del:** takes snapshot of what is displayed on camera
- Freeze:** freezes what is displayed on camera
- Effect:** adds image color